

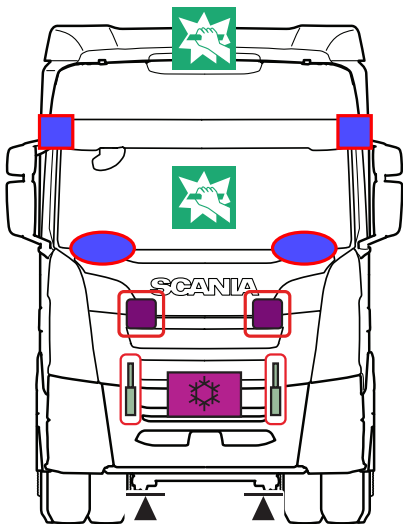


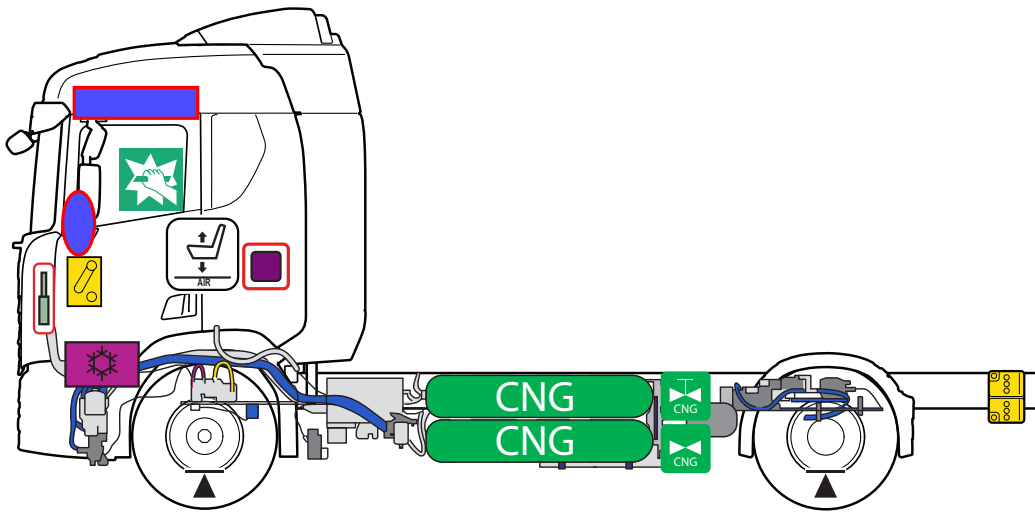

Scania 4x2 CR20H
Compressed natural gas (CNG)

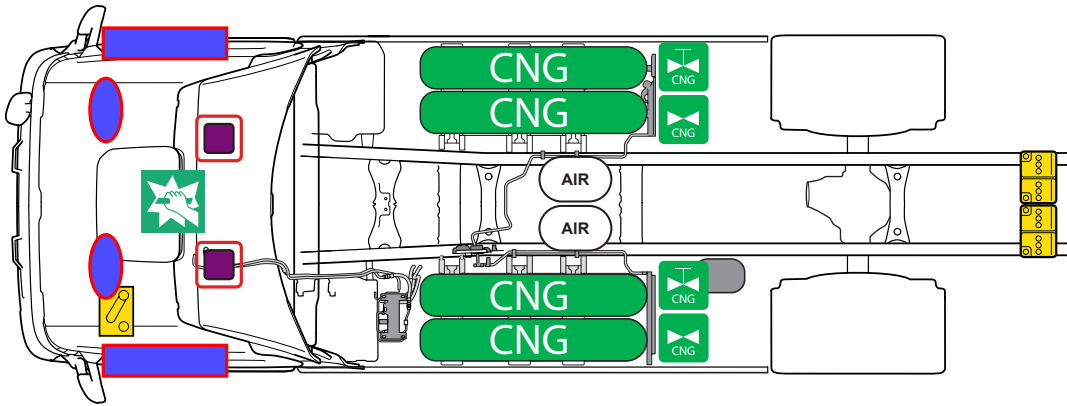

Printed matter No.
00:01-111

Printed matter issue.
1


	Compressed natural gas (CNG)		Manual shut of valve		Pressure relief valve		Device to shut down power in vehicle, 24V		Seat adjustment
	Lifting point		Low voltage battery, 24V		Seat belt pretensioner		Triggered gas strut, triggered preloaded spring		Fuel tank, diesel or biodiesel
	Break to obtain access		Air tank		Airbag		Gas line		Fire extinguisher
	Air-conditioning component		Emergency exit						

1. Identifiers




2. Immobilisation / stabilisation / lifting

1. Activate the parking brake

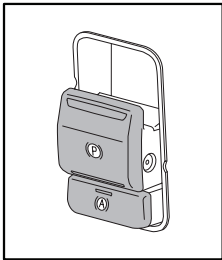

2. Lifting points

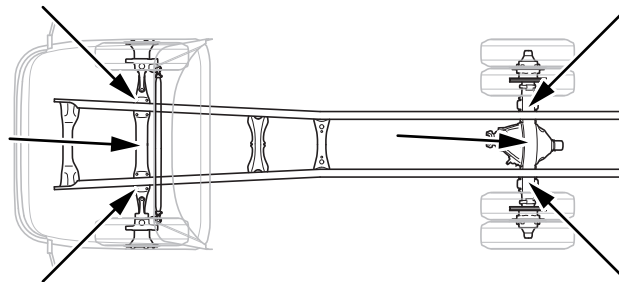


3. Disable direct hazards / safety regulations

1. The low voltage battery switch (A) is located on the instrument panel*. (* On the drivers side)


If there are no low voltage battery switches, the low battery voltage is disconnected at the battery poles.

2. Shut off the CNG-tanks shut of valves (B). There is a valve on each tank.

A.

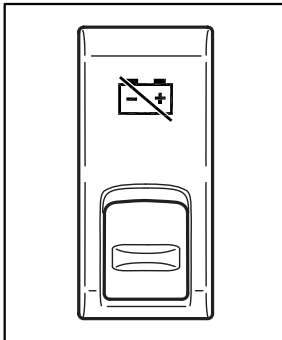

B.

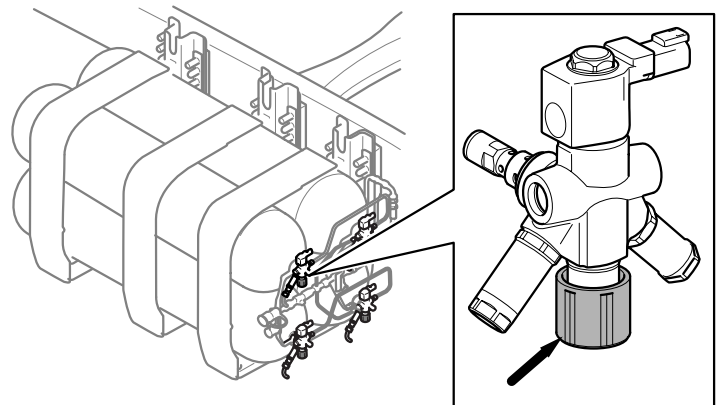


4. Access to the occupants

1. Through driver or passenger door.

2. Break through the side window.

Note! Front windscreen is laminated.

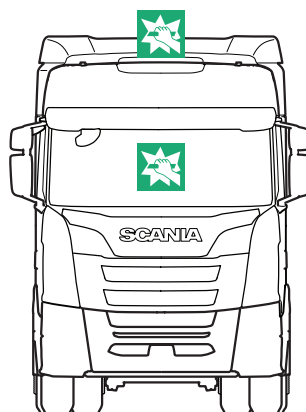

7. In case of submersion



If possible:

1. Remove the vehicle from the water.
2. Disable direct hazards (see section 3. Disable direct hazards / safety regulations).



Wear appropriate Personal Protective Equipment (PPE).

8. Towing / transportation / storage




Store the vehicle at a safe distance from other vehicles, buildings and combustible objects.




Do not tow a CNG powered truck if there is a CNG leak.

1. The towing eye fastening point is located under the front bumper.
2. Shut down the power of the vehicle
(See section 3. Disable direct hazards / safety regulations).
3. Keep away from inflammable and explosive materials.

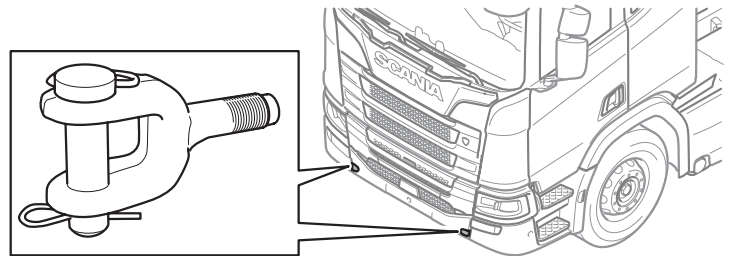

Allowed methods:

1. Towing.
(Note! Use only front towing eye for towing the vehicle with all wheels on the ground).
2. Lifting and towing
3. Transporting

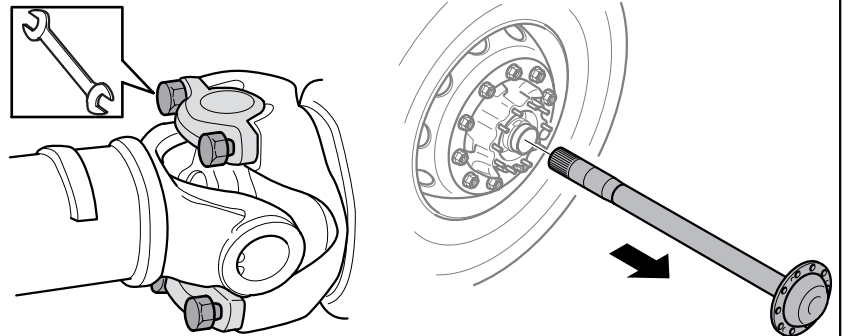

Note!

If the vehicle must be towed or transported more than 500 m, the speed must not exceed 10 km/h. Remove the drive shaft flange and the haft shaft from the drive axle. (See drivers manual for detailed information).

9. Important additional information



See drivers manual or rescue and towing manual for more detailed information

10. Explanation of pictograms used

N/A