

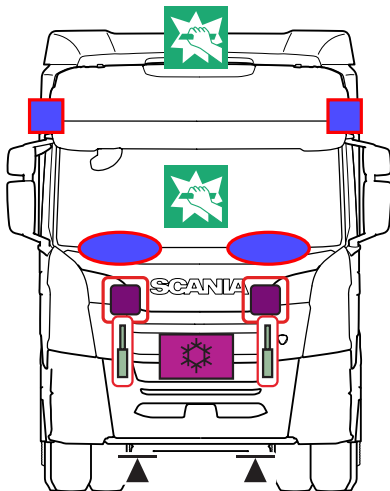


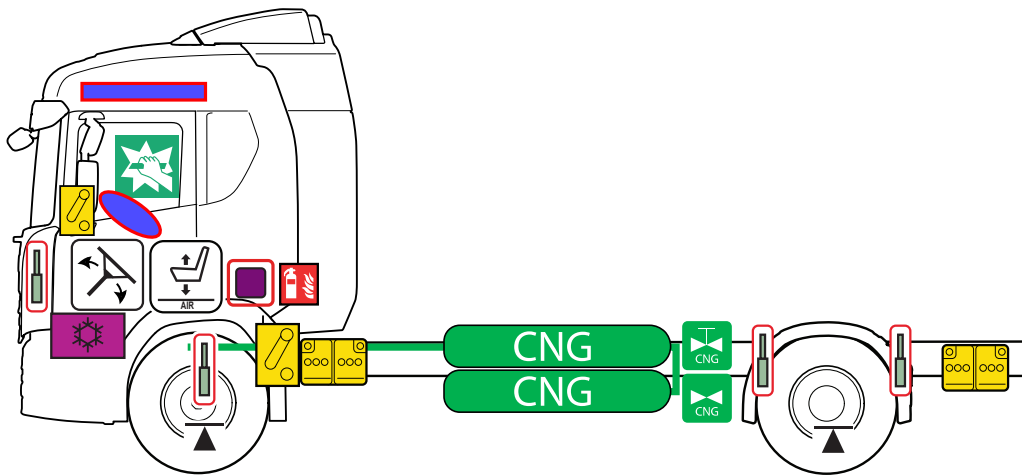

Scania 4x2 G
Compressed natural gas (CNG)

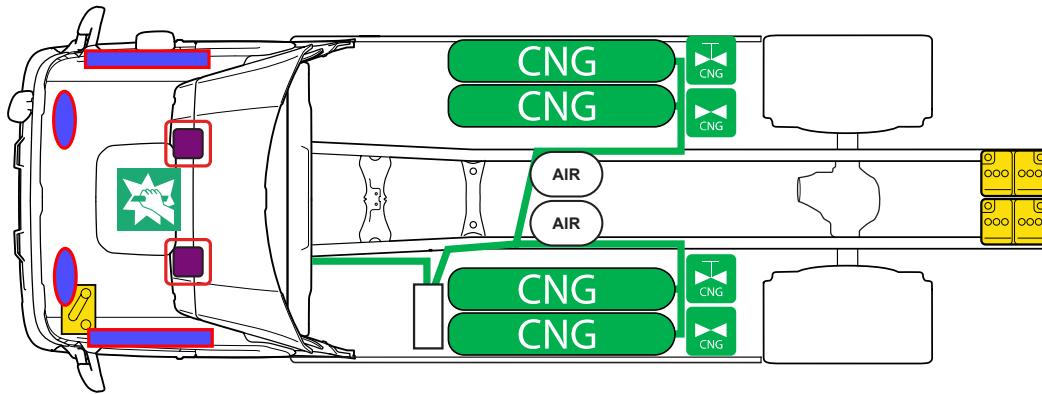

Printed matter No.
00:01-135

Printed matter issue.
1

	Compressed natural gas (CNG)		Low voltage battery, 24V		Manual shut of valve		Seat belt pretensioner		Pressure relief valve
	Lifting point		Break to obtain access		Air tank		Triggered gas strut, triggered preloaded spring		Fire extinguisher
	Airbag		Seat adjustment		Steering wheel tilt control		Emergency exit		Device to shut down power in vehicle, 24V
	Air-conditioning component		Gas line						

1. Identifiers




ENGINE POWER
CAB SIZE




2. Immobilisation / stabilisation / lifting

1. Activate the parking brake.

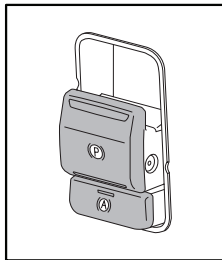

2. Lifting points

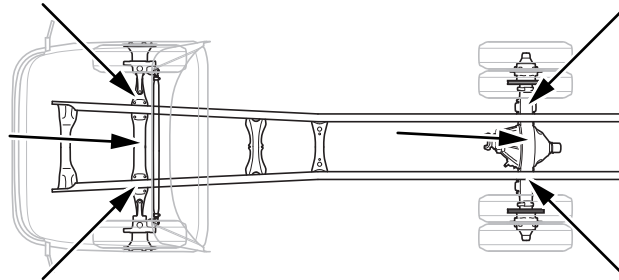


3. Disable direct hazards / safety regulations


1. The low voltage battery switch (A) is located on the instrument panel*. (* On the drivers side.)
If there are no low voltage battery switches, the low voltage is disconnected at the battery poles.

2. Shut of the CNG-tanks shut off valves (B). There is a valve on each tank.

A.

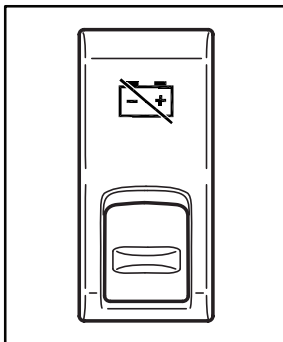


B.

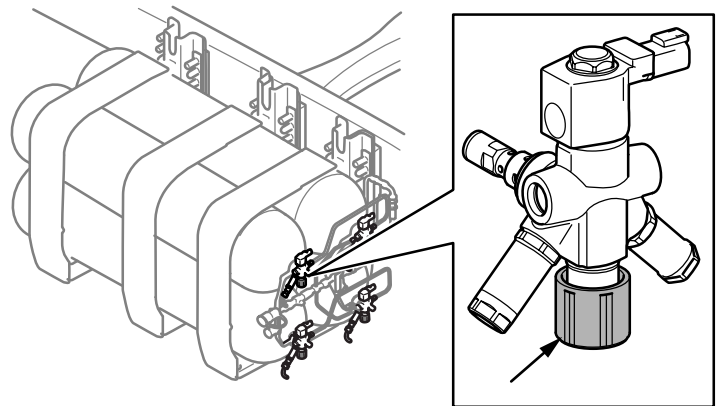

4. Access to the occupants

1. Through driver or passanger door.
2. Break through the side window.

Note! Front windscreen is laminated.

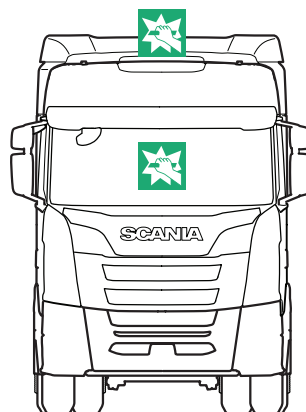

7. In case of submersion



If possible:

1. Remove the vehicle from the water.
2. Disable direct hazards (see section 3. Disable direct hazards / safety regulations).



Wear appropriate Personal Protective Equipment (PPE).

8. Towing / transportation / storage



Store the vehicle at a safe distance from other vehicles, buildings and combustible objects.



Do not tow a CNG powered truck if there is a CNG leak.

1. The towing eye fastening point is located under the front bumper







2. Shut down the power of the vehicle (See section 3. Disable direct hazards / safety regulations).
3. Keep away from inflammable and explosive materials.

Allowed methods:

1. Towing.

(Note! Use only front towing eye for towing the vehicle with all wheels on the ground).

2. Lifting and towing
3. Transporting

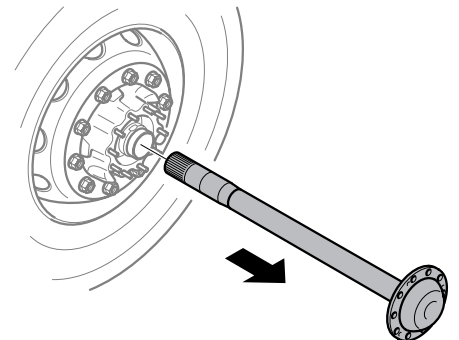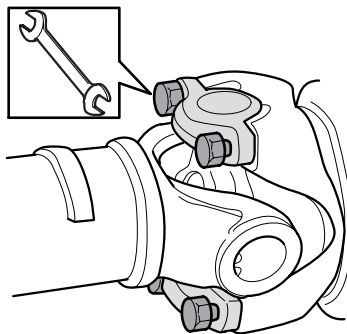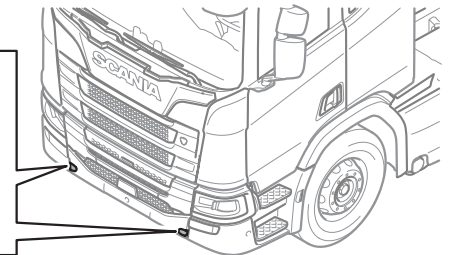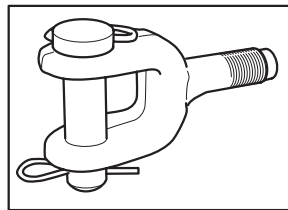

Note!

If the vehicle must be towed or transported more than 500 m, the speed must not exceed 10 km/h.

Remove the drive shaft flange and the haft shaft from the drive axle.

(See drivers manual for detailed information).

9. Important additional information



See drivers manual or rescue and towing manual for more detailed information

10. Explanation of pictograms used

N/A