

1. Identifiers




2. Immobilisation / stabilisation / lifting

1. Activate the parking brake






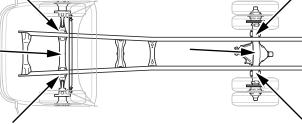

3. Disable direct hazards / safety regulations

1. The low voltage battery switch (1) is located on the instrument panel, on the driver side. If there are no low voltage battery switches, the low battery voltage is disconnected at the battery poles.

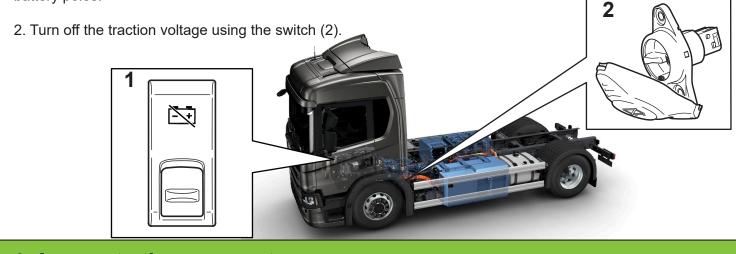


4. Access to the occupants

1. Through driver or passanger door.

2. Break through the side window.

Note! Front windscreen is laminated.



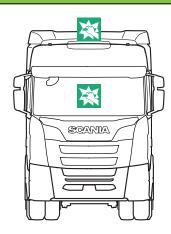






5. Stored energy / liquids / gases / solids

I. 650 V traction voltage lithium-ion battery.

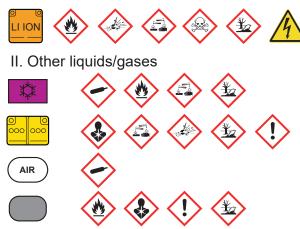

6. In case of fire

- I. Lithium-ion battery related fire Symptoms of the battery fire:
 - 1. Fire alarm on a dashboard.
 - 2. Smoke or steraks of intense fire rising from under the traction voltage cover.



Use large amount of water to put out the lithium-ion battery related fire.

Note! Pay attention to overpressure valves (bursting membrane).

Note! If electrolyte comes into contact with water, hydrofluoric acid and hydrogen gas may be formed.



Do not use a class ABC fire extinguisher for the battery related fire! ABC Dry chemical is ineffective.



When fighting the fire with water, any electrial hazards have to be considered and rules have to be respected.



Hydrogen fluoride, carbon monoxide, carbon dioxide can be released. Wear Self Contained Breathing Apparatus (SCBA) and cover your skin.



Risk of battery re-ignition (see section 8. Towing/transportation/storage).

II. Fire related to other material



Can only occur in the following compartments:

- auxiliary heater.

- electric machine.



If other materials are involved, a class ABS fire extinguisher can be used.

7. In case of submersion



If possible:

- 1. Remove the vehicle from the water.
- 2. Disable direct hazards (see section 3. Disable direct hazards / safety regulations). *Note! Risk of traction voltage battery fire after submerged in salt water.*



Risk of serious injury or death from electric shock.

Wear appropriate Personal Protective Equipment (PPE).

If electrolyte comes into contact with water, hydrofluoric acid and hydrogen gas may be formed.

8. Towing / transportation / storage



Store the vehicle at a safe distance from other vehicles, buildings and combustible objects.

Risk of battery fire re-ignition after incident.

Observe the batteries for at least 48 hours. Toxic and flammable gases may be released. In case od damaged/open battery cells, there is a risk for release of hydrofluoric acid and carbon monoxide.

1. The towing eye fastening point is located under the front bumper.



- 2. Shut down the power of the vehicle (See section 3. Disable direct hazards / safety regulations).
- 3. Keep away from inflammable and explosive materials.

Allowed methods:

1. Towing.

(Note! Use only front towing eye for towing the vehicle with all wheels on the ground).

- 2. Lifting and towing
- 3. Transporting

Note!

If the vehicle must be towed or transported more than 500 m, the speed must not exceed 10 km/h. Remove the drive shaft flange and the haft shaft from the drive axle. (See drivers manual for detailed information).

9. Important additional information

Do not touch or cut orange traction voltage power cables.

Do not touch or open traction voltage components.

Do not damage the battery pack, even if the propulsion system is deactivated.

Do not step on or press on batteries.

10. Explanation of pictograms used